




Simple Pass-through Downspout Tote Layout

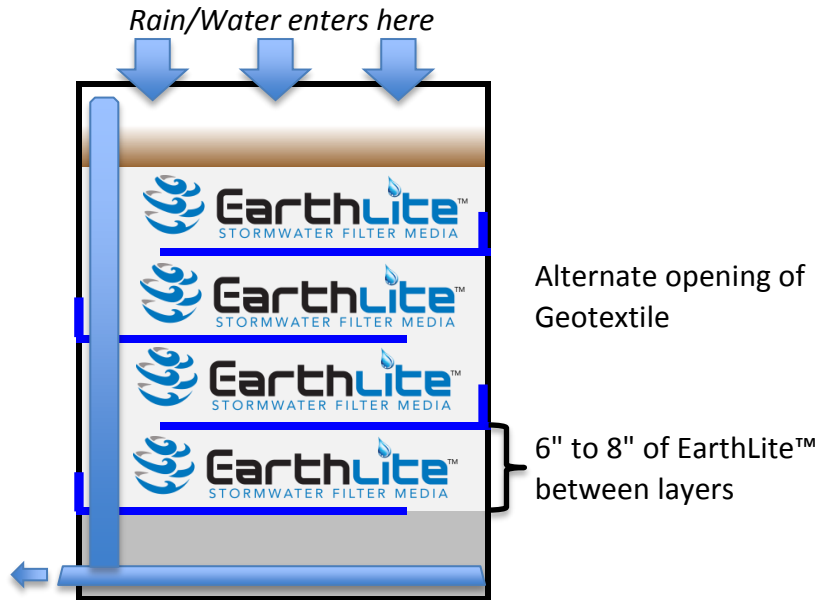

Not to Scale

Key:

= Crushed Gravel - 1/2" to 3/4" Crushed

= Top Cover - Either Shale, Inlet Filter Mat, Crushed Gravel or something for the water to land on that it won't erode

= EarthLite™ Stormwater Filter Media Fill



= Nonwoven Geotextile - 6 or 8 oz work best

= Discharge pipe

= Over flow pipe - NO Holes on Sides just the top. Could cover with screen